

Medical Gas

Installation Instructions

General

Conex Bänninger Medical Gas copper fittings should be professionally installed by an appropriately trained and qualified installer. All installations **must** be completed in line with local regulations and by-laws governing the installation, and all applicable health and safety practices must be adhered to.

Tube compatibility & standards

- Intended for connecting tubes in accordance with **EN 12735-1+A1** and **EN 13348** standards
- Meets standards: **EN 1254-1 & 4**.
- Packaging meets: **BOC/MEDAES 3000000**. Degreased to less than **100mg/m²** of hydrocarbon contamination, and comply with **HTM 02-01** medical gas pipeline regulations (sizes 6mm to 159mm).
- Quality assured in accordance with **SO 9001:2015**.

Joint information

- Designed for medical applications, Medical Gas fittings should be brazed (with the exception of union fittings with copper tails).
- When brazed correctly to copper tubes, Medical Gas capillary fittings form a mechanically strong leak-proof joint.
- Manufactured from copper, with some items produced in dezincification resistant (DZR) brass, the fittings are immune or highly resistant to dezincification, and safe to use with drinking water supply.

Do not force tube ends together prior to making joints. Joints should only be made on an unstressed pipework assembly.

Further technical information

Please visit - www.conexbanninger.com or email - technical@ibpgroup.com, for further information.

Applications


- Medical gas
- Oxygen

Tube preparation


Note: Avoid hand held grinding wheels, fast cutting saws and hacksaws, as these are **not suitable** for cutting tube ends square. If tube ends do become distorted, remove the damaged section, using an appropriate cutting method.

Safety Note: Working with an exposed flame can be potentially dangerous. Ensure that all appropriate health and safety regulations and requirements are met when using this product.


Leave the fittings in the packaging prior to installation, to protect them from contamination.

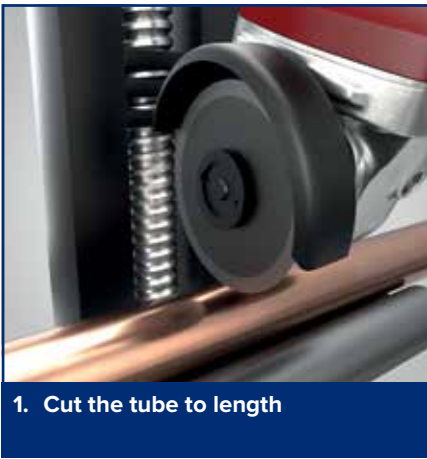

- Cut the tube to the required length ensuring it has retained its shape.

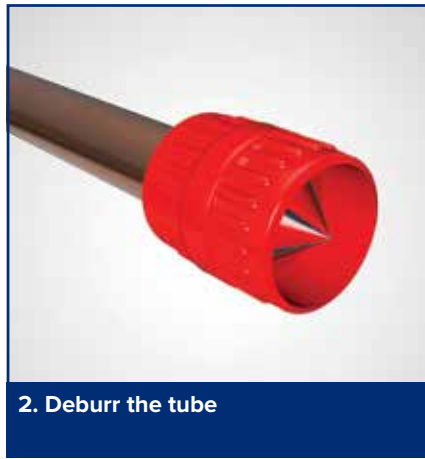

- Deburr the tube internally and externally.

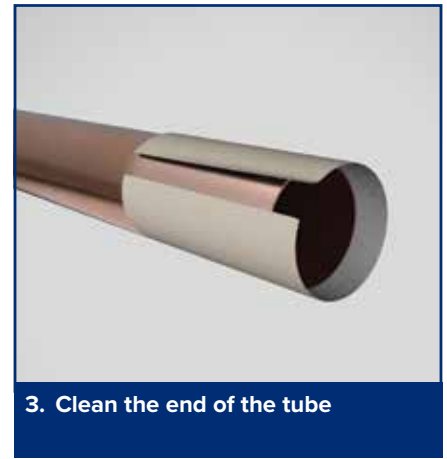

- Clean the end of the tube, ensuring that it is round and undamaged.



- Mark the correct insertion depth on the tube.



- Insert the tube fully into the socket to ensure joint integrity.




- Apply heat, moving the flame to ensure that parent metals and fitting are evenly heated.



- Touch a brazing rod, strip or wire to the joint mouth and melt in the flame.



- Once brazed, discontinue heating. During cooling, **do not** move or twist the components.

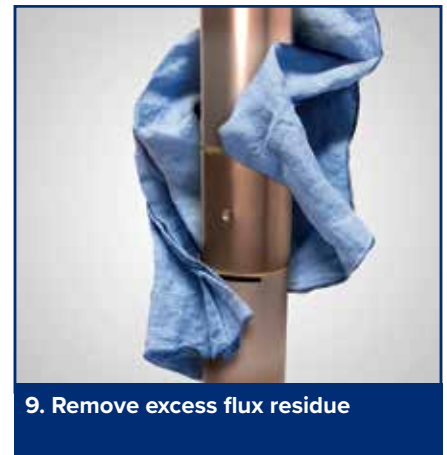

- Flux residue **must** be removed so the joint can be properly inspected, and tested.

The content of this publication is for general information only. It is the user's responsibility to determine suitability of any product, product data and specifications, for the purpose intended and reference should be made to our Technical Department if clarification is required – technical@ibpgroup.com. All products must be installed in accordance with our installation instructions. In the interests of technical development we reserve the right to change specification, design and materials without notice.

Conex Bänninger products are approved by numerous Standards Authorities and Certification Bodies. This is a representation of the full range from Conex Universal Ltd. Patents and trademarks are registered in numerous countries. Details on registered and pending patents protecting our products is available at public patent registers or can be requested from legal@ibpgroup.com. All documents, images and technical data are © of Conex Universal Limited. E&OA.